 
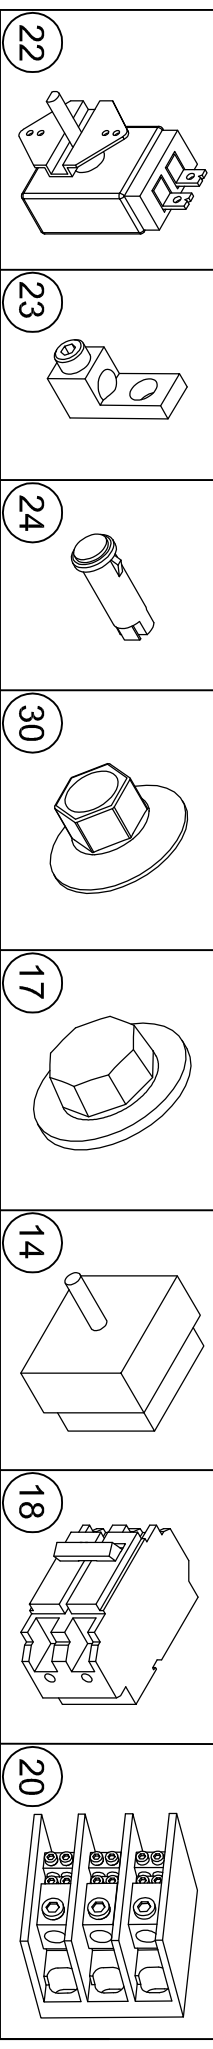 


# RRE - SERIES ELECTRIC RANGE

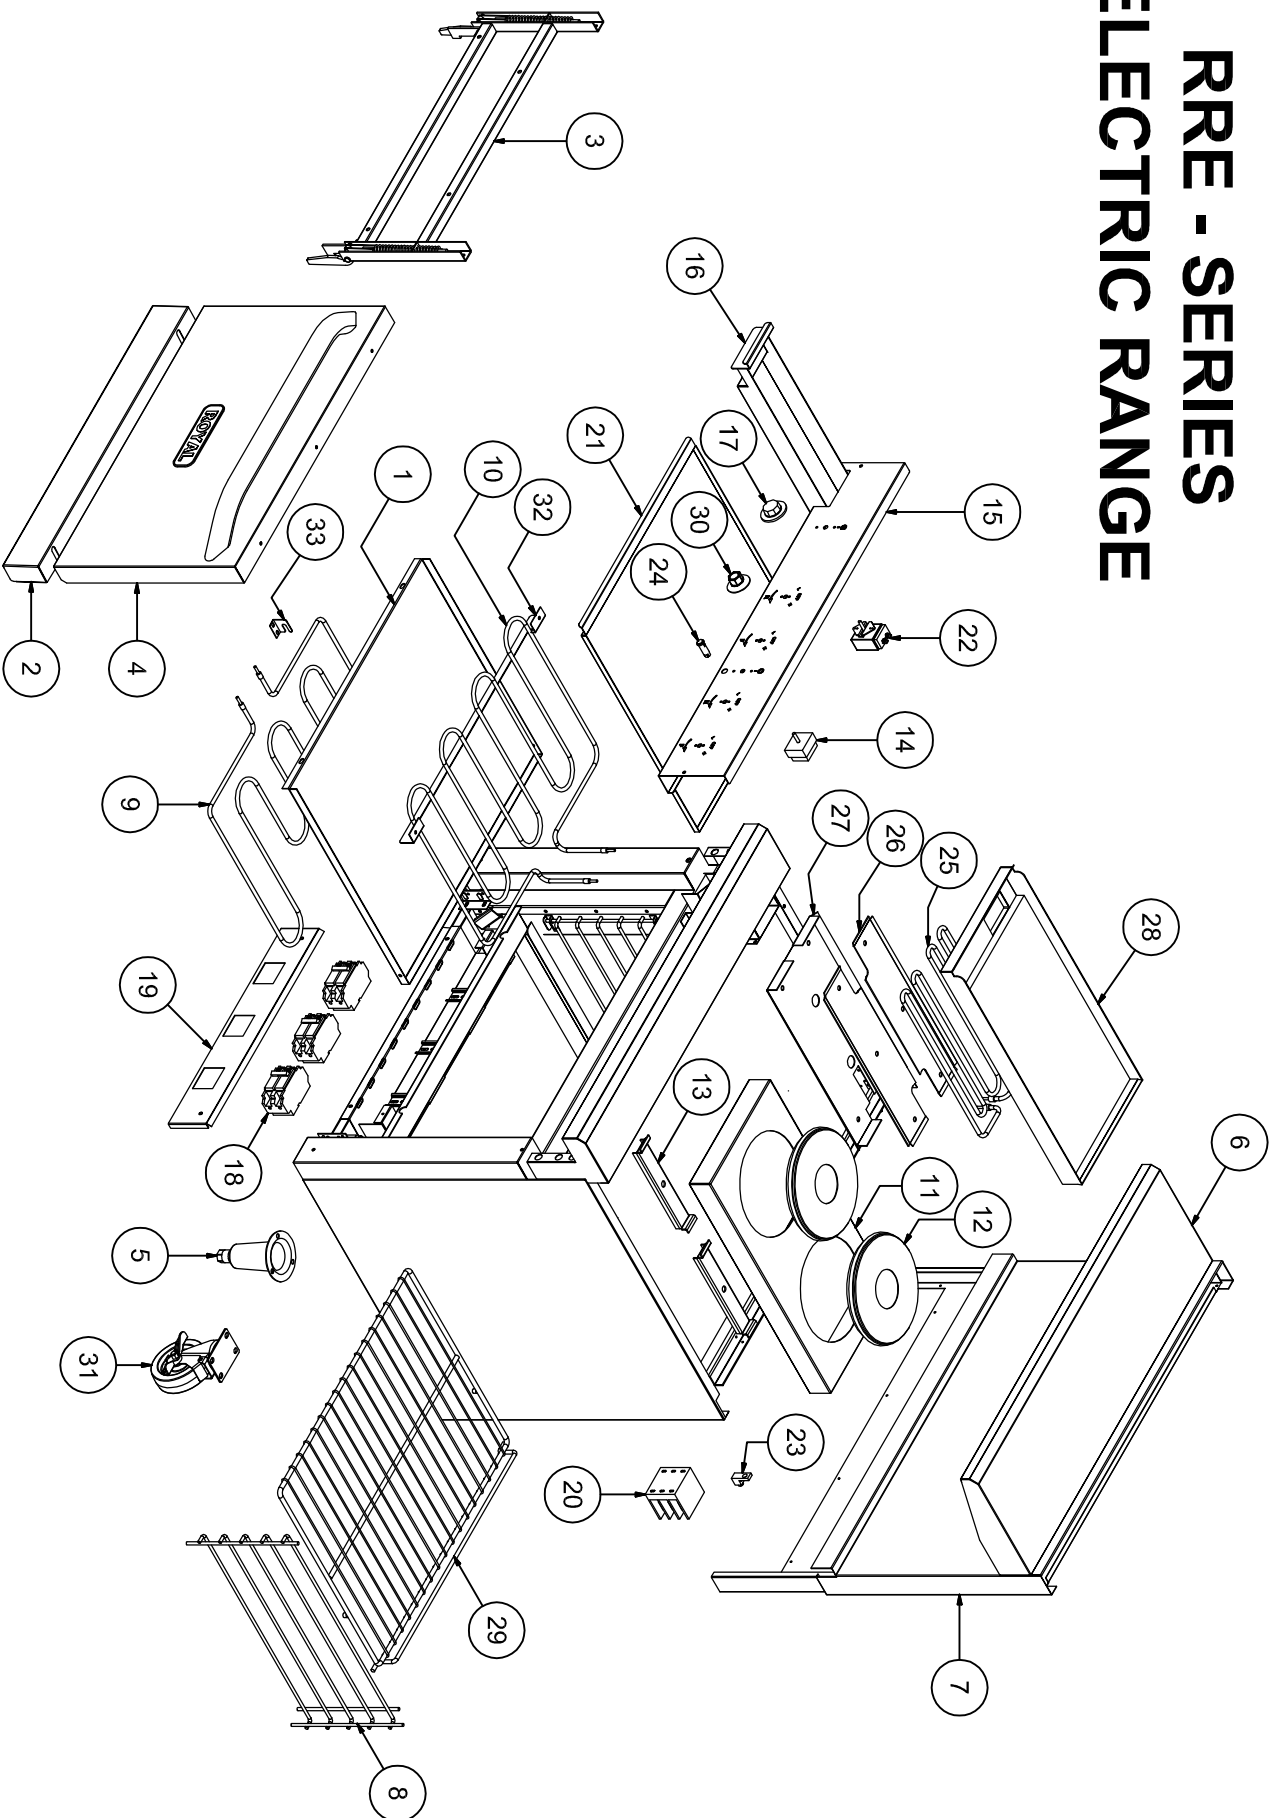

# RRE SERIES

## ELECTRIC RANGE

ITEM NO.	PART #	DESCRIPTION
1	30041	Oven Bottom
2	30045	Kick Plate
3	30043	Door Frame Assy.
4	30159	Oven Door Assy. (Complete)
5	1219	Cone Leg
6	30148	Shelf 36"
7	30138	Backgaurd Assy. 36"
8	3200	Rack Guide, sides
9	2571	Heater Element, Oven Bottom, <b>208V</b>
	2573	Heater Element, Oven Bottom, <b>240V</b>
10	2570	Heater Element, Oven Top, <b>208V</b>
	2572	Heater Element, Oven Top, <b>240V</b>
11	40494	Panel, Top Elements MTG
12	2577	Hot Plate Element, <b>208V</b>
	2578	Hot Plate Element, <b>240V</b>
13	40495	Bracket, Burner MTG
14	2574	Infinite Control Switch, <b>208V</b>
	2575	Infinite Control Switch, <b>240V</b>
15		Control Panel, Model Specific, Contact Factory
16	30406	Grease Can Wldmt
17	2597	Knob, Thermostat
18	2589	Circuit Breaker, 2 Pole
19	40513	Cover, Circuit Breaker
20	2584	Power Distribution Block, 3 Pole
21	30476	12" Crumb Tray, Hot plate
	30008	24" Crumb Tray, Hot plate
	30039	36" Crumb Tray, Hot plate
22	2579	Thermostat
23	2585	Ground Lug
24	2595	Indicator Light, Red
25	2580	Heater Element, Griddle, <b>208V</b>
	2581	Heater Element, Griddle, <b>240V</b>
26	40507	Plate, Griddle Element
27	40508	Cover, Griddle Element
28	40983	12" Griddle Plate Wldmt, LH
	40975	24" Griddle Plate Wldmt, LH
	40985	36" Griddle Plate Wldmt, LH

**CONTINUED**

# RRE SERIES

## ELECTRIC RANGE

ITEM NO.	PART #	DESCRIPTION
29	3210	Oven Rack
30	2576	Knob, Infinite Switch
31	2192	Caster, Swivel Plate, without break
	2193	Caster, Swivel Plate, with break
32	40522	Top Oven Element MTG
33	40493	Bracket Heater MTG